


Reference picture



Configuration(mm)

[illegible]

Typical test curve

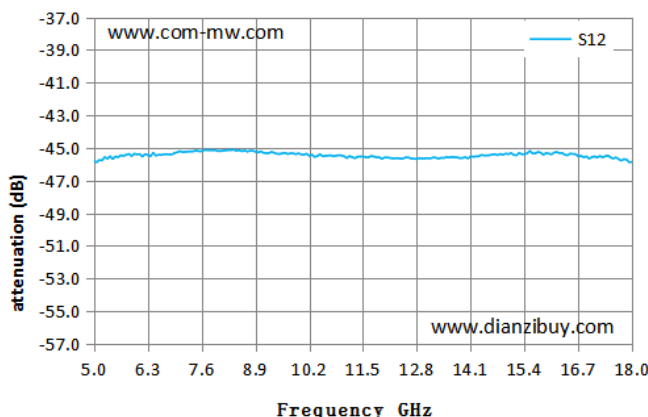


2. Small power attenuators do not have input and output directions, nor do they indicate directions. When high-power attenuators have input and output port markings, they must be connected to the equipment in the specified direction, otherwise the attenuator may burn out.

E-mail: Sales@com-mw.com

Typical test data

Frequency GHz	S11 VSWR	S22 VSWR	S12 Attenuation
5.00	1.04	1.09	-45.77
5.93	1.04	1.13	-45.49
6.86	1.01	1.14	-45.40
7.79	1.09	1.05	-45.14
8.71	1.06	1.33	-45.23
9.64	1.06	1.46	-45.31
10.57	1.06	1.27	-45.51
11.50	1.09	1.09	-45.53
12.43	1.04	1.21	-45.66
13.36	1.07	1.32	-45.65
14.29	1.04	1.30	-45.53
15.21	1.08	1.08	-45.45
16.14	1.06	1.17	-45.29
17.07	1.06	1.29	-45.58
18.00	1.10	1.20	-45.85

Power Derating Curve

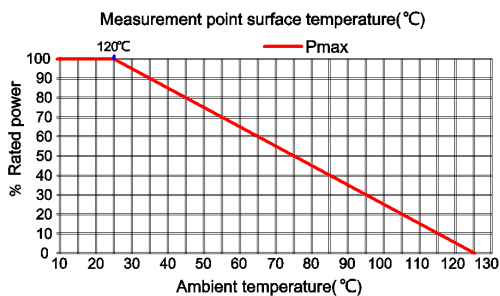

Note: The specifications and performance data contained in this data sheet are based on tests established by CMW.